

Prima di montare la Specchiera leggere attentamente le fasi di montaggio.
-Istruzioni di montaggio Specchi

Fase 1-Aprire la scatola di cartone facendo attenzione al lato dello specchio:




Fase 2-La ferramenta per appendere lo specchio si trova all'interno della scatola di imballo:




Fase 3-Forare il muro con una punta da 8mm calcolando una distanza delle attaccaglie pari alla larghezza della specchiera -200mm.

Esempio: Se la specchiera ha una larghezza di 1000mm l'interasse sarà 800mm.

Particolare Attacagli

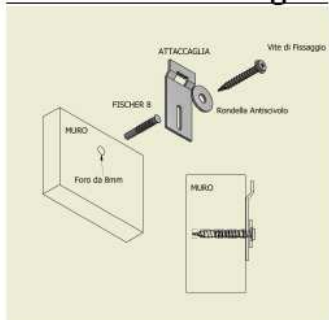

Distanza Attacaglie

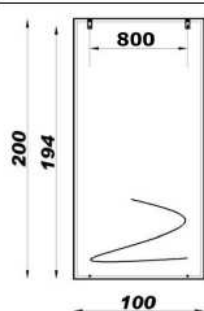


Fase 4- Regolazione inclinazione messa in bolla.




Fase 5-Appendere la specchiera al muro tenendola leggermente inclinata in modo che l'attaccaglia si agganci alla cava antisgancio.

La specchiera si sgancerà dal muro solo inclinandola.

Come inclinare la specchiera



Attaccaglia Agganciata al profilo

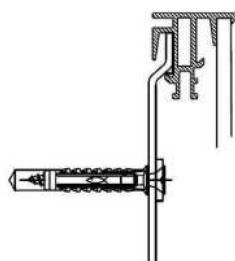

Please read carefully this document before installing the mirror.

Step 1- Open the carton box, paying attention to the mirror's side.




Step 2 – All the screws, washers and brackets are included. Check on the mirror's back.




Step 3 – Drill 8mm holes in the wall, considering that the ideal distance from one bracket to another is the mirror width – 200 mm.


How to fix the brackets

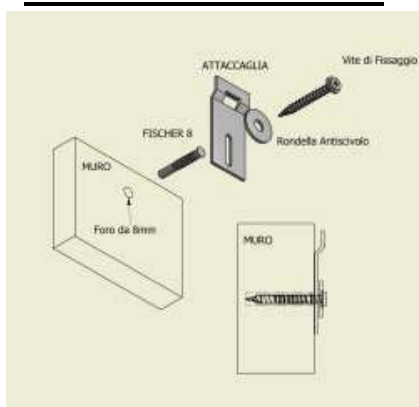

Distance between brackets

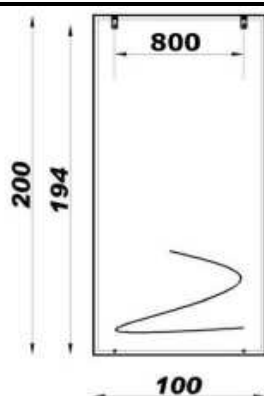

Step 4 – Check the inclination, using a spirit level

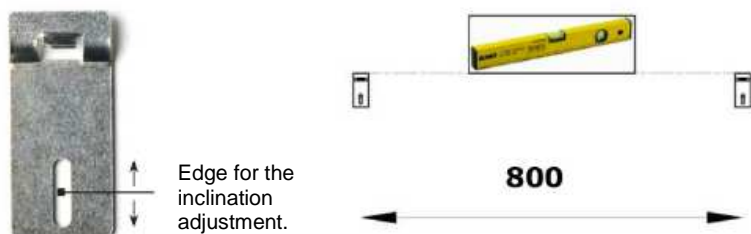

Step 5 – Incline the mirror to hang it to the wall. Brackets have to hook into the slot of the profile on the back of the mirror.

